



## ACOUSTIC FURNITURE

### Diffuse WorkBox One-person work station

Providing people with real choice about where they work within an office is an important element for today's workplace designers and specifiers. Diffuse WorkBox is a great solution for open-plan, hybrid and co-working spaces. The curved shape of the screen increases the acoustic comfort, reduces distraction and creates a little haven of privacy and calm within busy workplaces.

#### FEATURES

- ▶ Designed and manufactured in the UK
- ▶ All screens are 8mm thick
- ▶ Made from 50% recycled PET
- ▶ Manufacturer's 5 year guarantee
- ▶ All screens pass BS 5852: 2006 Clause 12, Ignition Source 5 (Crib 5)
- ▶ No formaldehyde binders
- ▶ Low VOCs
- ▶ Available in low and high screen options
- ▶ Integral desk available, including sit/stand options in a variety of finishes
- ▶ Mobile option available for single WorkBox
- ▶ Single desk and multiple desk configurations possible
- ▶ BIM/Revit files available to download from [www.allsfar.com](http://www.allsfar.com)




## WorkBox single desk\*

CODE	DESCRIPTION	DIMENSIONS (mm)
DWB1400	Diffuse WorkBox desk, high screen	1250W x 1400H x 630D
DWB1800	Diffuse WorkBox desk, low screen	1250W x 1800H x 630D
DWBST1400 (sit stand desk)	Diffuse WorkBox desk, low screen	1250W x 1400H x 630D
DWBST1800 (sit stand desk)	Diffuse WorkBox desk, high screen	1250W x 1800H x 630D


For mobile options please add MOB to end of code.

\* Desk size: 1150 x 580 mm

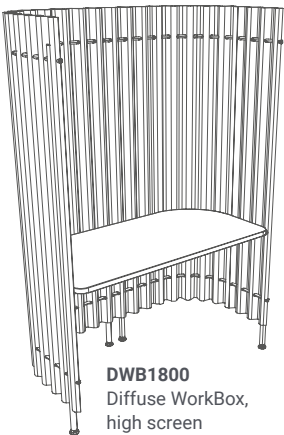

## WorkBox enclosed single desk

CODE	DESCRIPTION	DIMENSIONS (mm)
CONFIG 1L	Diffuse enclosed desk, low screen	1250W x 1400H x 1890L
CONFIG 1H	Diffuse enclosed desk, high screen	1250W x 1800H x 1890L

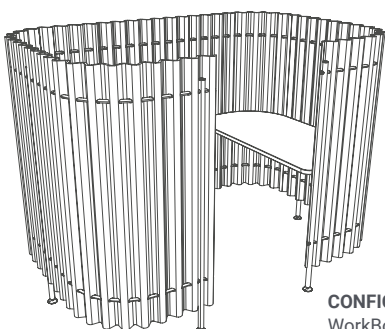

Other configurations with multiple desk runs available on request.

## Care Instructions

Our products are extremely durable and require little attention to maintain their good looks. Light dusting on a regular basis will prevent dust build up and most marks can be cleaned with a mild detergent solution followed by rinsing and blotting. Stains should be dealt with according to the chart below.

Before carrying out a proposed cleaning method, apply to a concealed section to ensure it will not affect the product or adhesive. Avoid cleaning methods that create severe abrasion. NB: Solvent and mineral based cleaners should be used sparingly to avoid possible degradation of the adhesive adhering the product to the substrate.

### Professional Cleaning Methods

Stain	Treatment Guide
Blood	A, C
Burn/Scorch Mark	K
Chewing Gum	I, B, D, C
Chocolate	B, D, C
Cooking Oils	B, D, C
Crayon/Colour Markers	B, D, C
Drinks	A, C
Dust/Dirt	Vacuum, then J or C
Excrement	B, C
Grass	C
Grease	B, D, C
Ink (ballpoint)	D, E
Ink (fountain)	A, C
Lipstick	B, E, C, D
Mildew	C
Milk	A, E
Mud	B, C
Nail Polish	A, G
Oil	B, D, C
Paint (water based)	A, F, C
Paint (oil based)	A, H, D, C
Sauces	B, C, D
Shoe Polish	B, C, D
Urine	A, C
Vomit	A, C, D
Wine	A, Add Salt, C

### Key

- A** Mop up excess as soon as possible with a sponge or cloth.
- B** Remove surplus with a knife edge or appropriate instrument.
- C** Sponge with a solution of carpet shampoo working from well outside the stain in a circular motion towards the centre (this avoids spreading the stain). Sponge afterwards with clean warm water and mop excess moisture with a clean dry cloth or sponge. Allow to dry then brush gently with a soft brush. If any stain remains, sponge with a solution of one part household bleach to six parts clear water. Thoroughly rinse after treatment.
- D** Lightly sponge with household dry cleaning fluid and blot. Apply sparingly, as the substance may have an adverse effect on the adhesive.
- E** Sponge with methylated spirits and blot dry.
- F** Lubricate the stain with glycerine or petroleum jelly.
- G** Apply nail polish remover. The nail polish remover should not include lanolin or be of a greasy nature.
- H** Sponge with turpentine (or substitute).
- I** Freeze with ice cubes and scrape away while cold.
- J** Clean with regular extractive carpet cleaner (if possible).
- K** Use circular cutter and remover damaged portion. Re-glue new piece into place.

Please contact us for a detailed installation guide.

Showroom: 14 Baltic Street East, London, ECIY 0UJ

Head Office and Factory: Aspect Gate, 1 Olds Approach, Watford, WD18 9RF

www.allsfar.com • +44 (0)20 3889 9888 • hello@allsfar.com



**ALLSFÄR**