



ACOUSTIC SCREENS

Orbit

Floorstanding screens

Our floor standing screens are designed to be strong and versatile to ensure they meet the demands of today's fast-changing work environments. The free-standing screens offer privacy, discretion and can be used as movable wall partitions helping to create a calm, quiet space within busy open-plan offices. Our range is available in a variety of designs, sizes and colours and have all been designed and manufactured by our in-house team.

FEATURES

- ▶ 24mm PET felt
- ▶ Designed and manufactured in the UK
- ▶ Made using GRS-certified fibres containing 99% recycled content
- ▶ Manufacturer's 5 year guarantee
- ▶ No formaldehyde binders
- ▶ Low VOCs
- ▶ Choice of designs, colours and sizes to choose from
- ▶ Available in a wide range of colours, sizes and designs
- ▶ Improve concentration within busy offices
- ▶ Can create flexible spaces to maintain confidentiality and privacy
- ▶ Pass BS 5852: 2006 Clause12, Ignition Source 5 (Crib 5)

Bespoke options available include Öra Plain, Fabric wrapped, Öra V, (Dual), Öra 3D, Öra Print, Cut out pattern and Logo options.




Orbit Leaf floor standing screen

CODE	DIMENSIONS (mm)
ORB-L	1065W x 1600H x 24

Orbit floor standing screens


CODE	DIMENSIONS (mm)
ORBR10001200	1000W x 1200H x 24
ORBR12001400	1200W x 1400H x 24
ORBR12001600	1200W x 1600H x 24
ORB-BESPOKE	To be specified by client

Alternative bespoke sizes or shapes available on request.
W & H read in reverse order for landscape orientation screens.

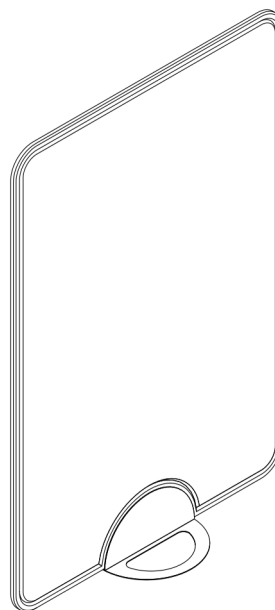


Orbit floor standing screens


Plain

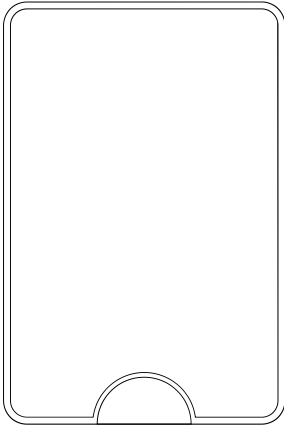


Jigsaw
(V-cut pattern)

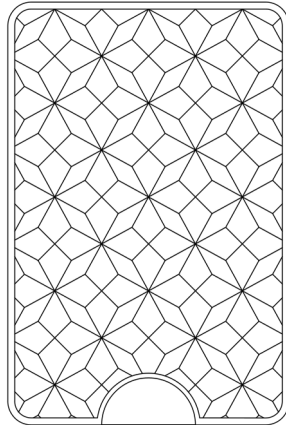


Orient
(V-cut pattern)

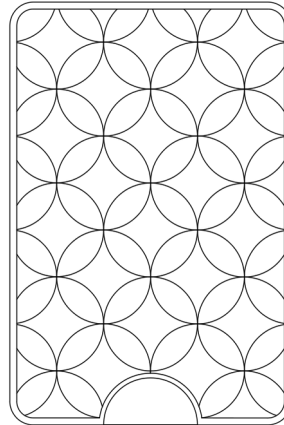


Blocks I
(Cut out pattern)

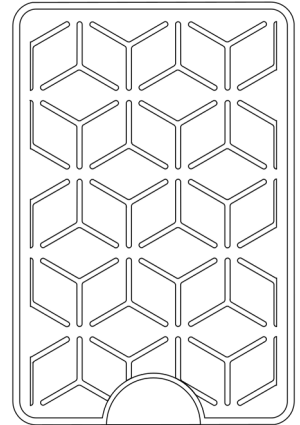


Blocks II
(V-cut Dual colour pattern)

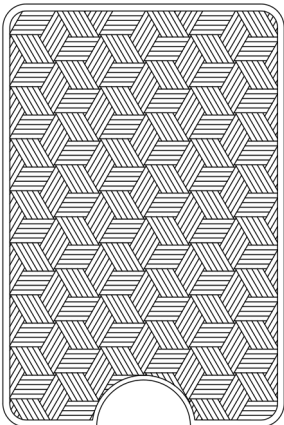



Kaleidoscope
(Cut out pattern)

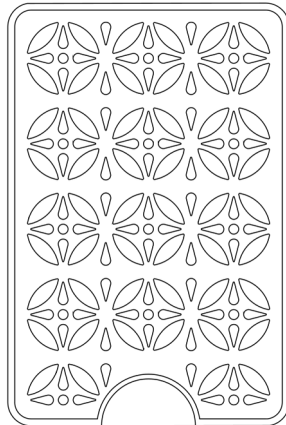

Hexagon
(3D pattern)

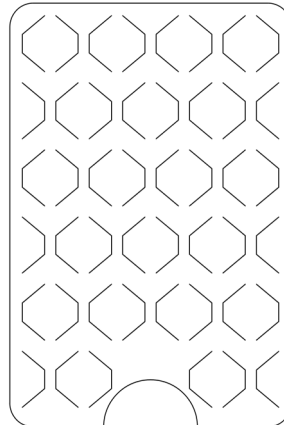

Curve
(3D pattern)

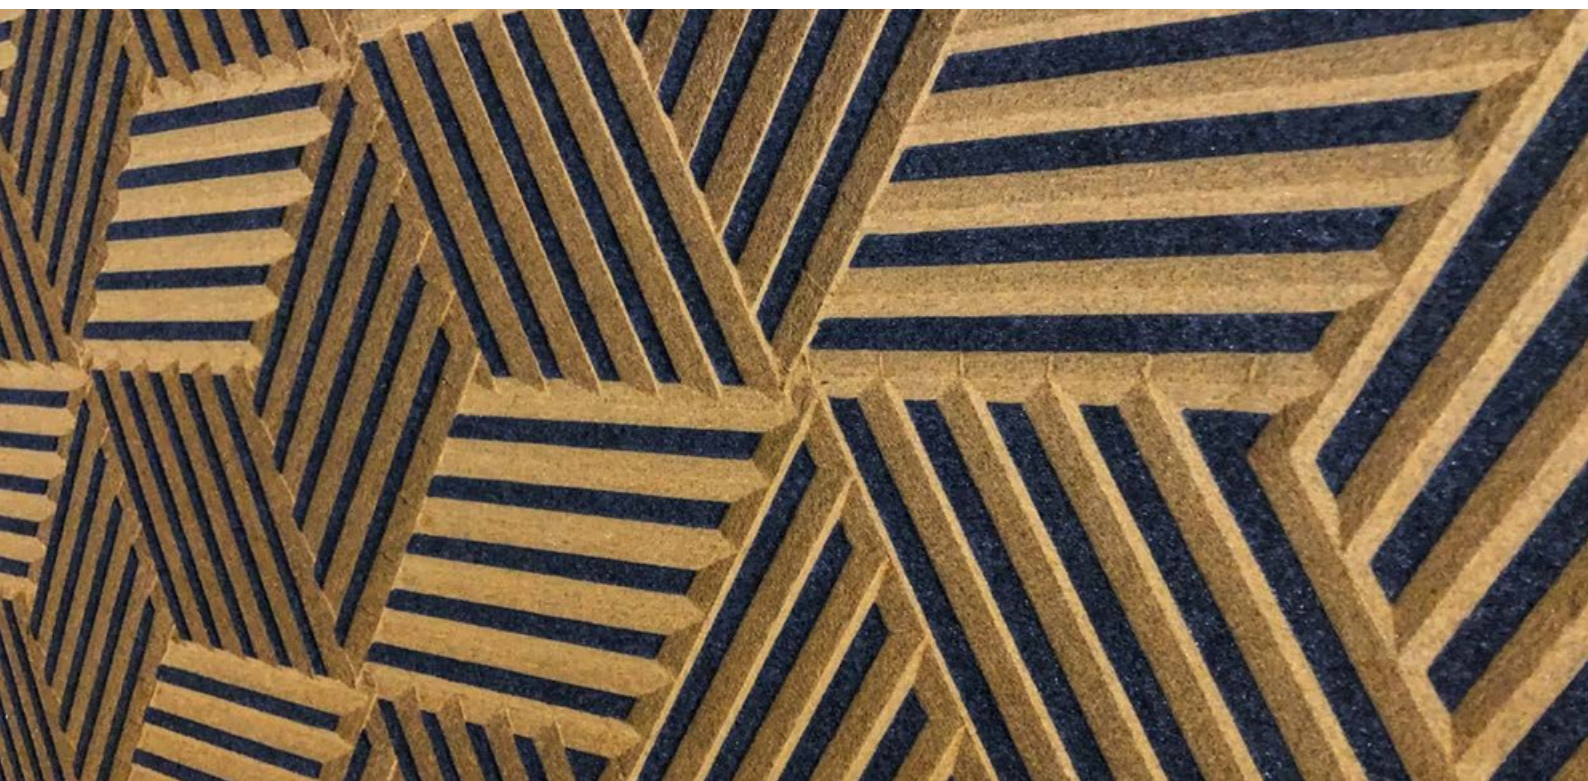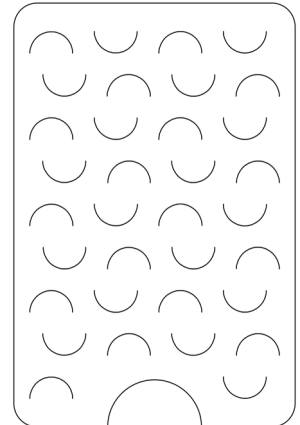



ÖRA COLOURS*

CARDINAL RED	ROBIN RED FLECK	ORIOLE ORANGE	ORIOLE ORANGE FLECK	FLAMINGO PINK	CHAFFINCH CORAL	SISKIN YELLOW	CANARY YELLOW	CANARY YELLOW FLECK	LARK MUSTARD FLECK
WOODPECKER GREEN	WOODPECKER GREEN FLECK	GOLDCREST GREEN FLECK	TURACO OLIVE GREEN	WARBLER SAGE GREEN	PEACOCK TEAL FLECK	MALLARD TEAL	SWALLOW DARK BLUE	JACARINA BLUE FLECK	SABREWING PURPLE FLECK
KINGFISHER BLUE FLECK	OWL DARK BEIGE FLECK	WHEATEAR BEIGE	WHEATEAR BEIGE FLECK	SANDERLING GREY	DOLLARBIRD BLUE GREY FLECK	HERON GREY	SKUA GREY	RAVEN BLACK	DOVE WHITE

REJUVENATE PALETTE



REFINE PALETTE



REFRESH PALETTE



* Please include felt colour when ordering.

Care Instructions

Our products are extremely durable and require little attention to maintain their good looks. Light dusting on a regular basis will prevent dust build up and most marks can be cleaned with a mild detergent solution followed by rinsing and blotting. Stains should be dealt with according to the chart below.

Before carrying out a proposed cleaning method, apply to a concealed section to ensure it will not affect the product or adhesive. Avoid cleaning methods that create severe abrasion. NB: Solvent and mineral based cleaners should be used sparingly to avoid possible degradation of the adhesive adhering the product to the substrate.

Professional Cleaning Methods

Stain	Treatment Guide
Blood	A, C
Burn/Scorch Mark	K
Chewing Gum	I, B, D, C
Chocolate	B, D, C
Cooking Oils	B, D, C
Crayon/Colour Markers	B, D, C
Drinks	A, C
Dust/Dirt	Vacuum, then J or C
Excrement	B, C
Grass	C
Grease	B, D, C
Ink (ballpoint)	D, E
Ink (fountain)	A, C
Lipstick	B, E, C, D
Mildew	C
Milk	A, E
Mud	B, C
Nail Polish	A, G
Oil	B, D, C
Paint (water based)	A, F, C
Paint (oil based)	A, H, D, C
Sauces	B, C, D
Shoe Polish	B, C, D
Urine	A, C
Vomit	A, C, D
Wine	A, Add Salt, C

Key

- A** Mop up excess as soon as possible with a sponge or cloth.
- B** Remove surplus with a knife edge or appropriate instrument.
- C** Sponge with a solution of carpet shampoo working from well outside the stain in a circular motion towards the centre (this avoids spreading the stain). Sponge afterwards with clean warm water and mop excess moisture with a clean dry cloth or sponge. Allow to dry then brush gently with a soft brush. If any stain remains, sponge with a solution of one part household bleach to six parts clear water. Thoroughly rinse after treatment.
- D** Lightly sponge with household dry cleaning fluid and blot. Apply sparingly, as the substance may have an adverse effect on the adhesive.
- E** Sponge with methylated spirits and blot dry.
- F** Lubricate the stain with glycerine or petroleum jelly.
- G** Apply nail polish remover. The nail polish remover should not include lanolin or be of a greasy nature.
- H** Sponge with turpentine (or substitute).
- I** Freeze with ice cubes and scrape away while cold.
- J** Clean with regular extractive carpet cleaner (if possible).
- K** Use circular cutter and remove damaged portion. Re-glue new piece into place.

Please contact us for a detailed installation guide.

Showroom: 14 Baltic Street East, London, ECIY 0UJ

Head Office and Factory: Aspect Gate, 1 Olds Approach, Watford, WD18 9RF

www.allsfar.com • +44 (0)20 3889 9888 • hello@allsfar.com

